


Component side	CS/Top topview	K1
Solderside	SS/Bottom troughview	K2
Silkscreen	CS/Top	B1
Silkscreen	SS/Bottom	B2
Contour and additional routings		UMRISS
Innerlayer 1		L1
Innerlayer 2		L2

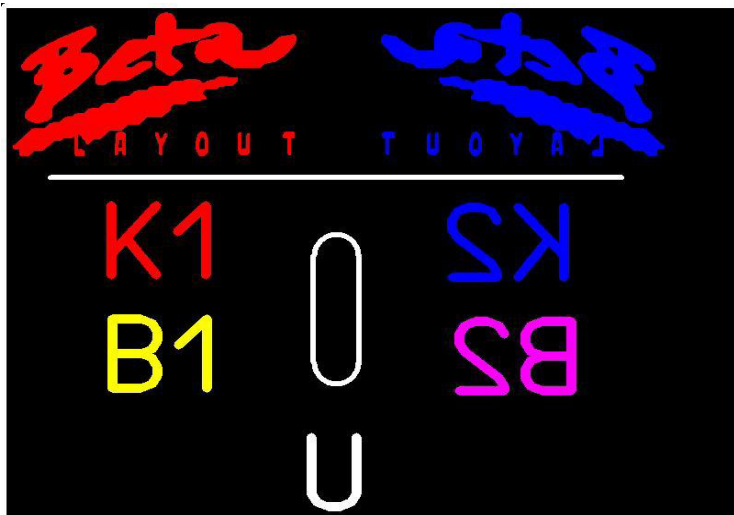

It's better to create a readable text that the layerbuild is clear. This text must be readable after manufacturing. For Example: SS, CS, Top, Bottom or the filename.